





Fibre Setup Guide

- MI AX3600 WI-FI 6 AIoT Router



Setup on Mobile Device

- 1 Connect Fiber ONT to WAN port of Mi router.
Power on MI router.
- 2 Open Wi-Fi setting on your smartphone,
and connect to SSID "Xiaomi_xxxx".
- 3 If setup page did not pop up automatically,
please type "192.168.31.1" on browser.
- 4 Select your Country to **New Zealand**.
- 5 Select "Continue setup without
Connecting a network cable".

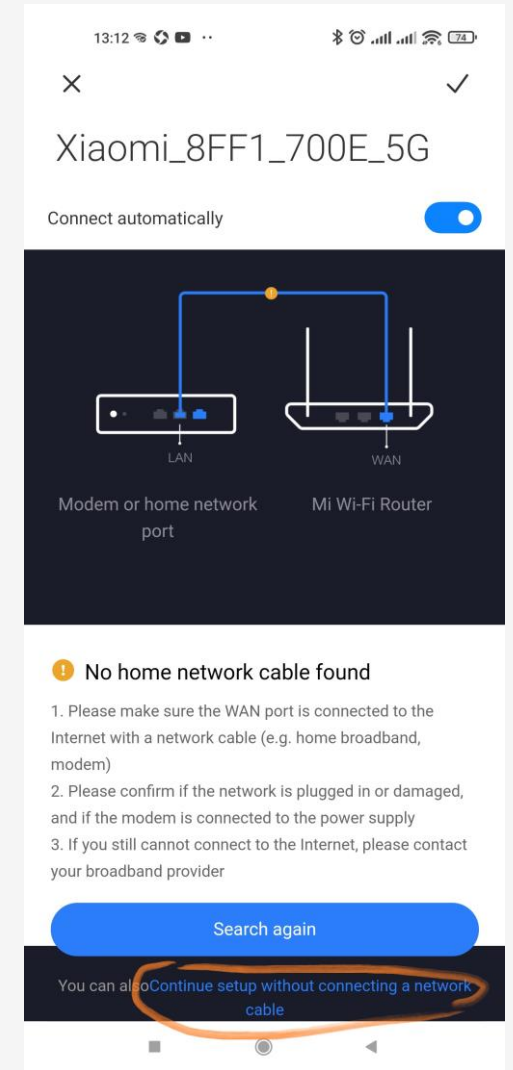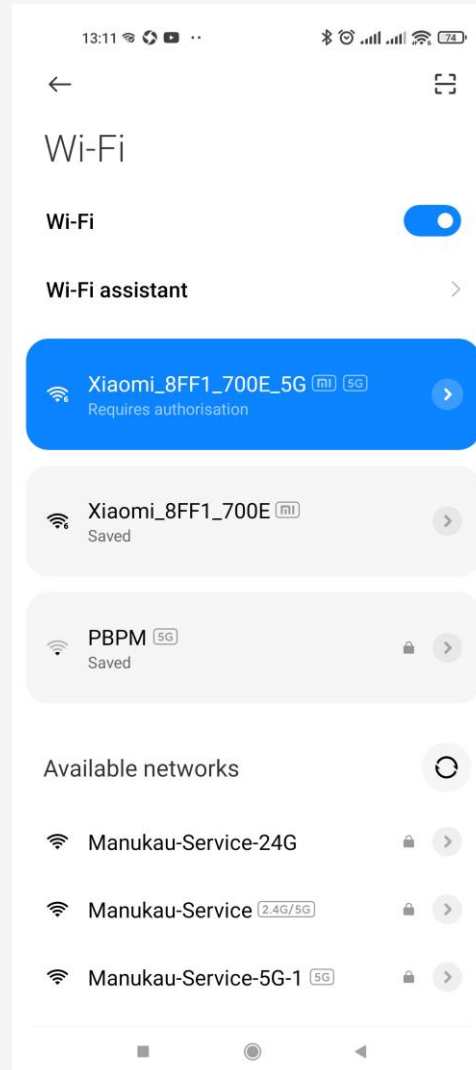

Setup on Mobile Device

- 1 For user who use Spark as ISP,
PPPoE / User name & password / VLAN 10
- 2 For user who use Vodafone as ISP,
DHCP / VLAN 10
- 3 For user who use MyRepublic as ISP,
DHCP
- 4 For user who use Others as ISP,
please check what setting above
Required for third party routers.
- 5 Setup your own
WIFI name & password.

Select setup type **Spark**

Please select Internet connection type

Broadband account online **PPPOE** ✓

Automatically retrieve IP DHCP

Static IP

Wi-Fi access point

Access point

Additional ISP Settings

Custom

Internet VLAN ID

802.1Q Tag
Note: The internet VLAN ID provided by the ISP can be configured.
Please ignore it if no VLAN setting is required.

Next

Internet guide **Spark**

Please enter the account name and password provided by your broadband provider

Broadband account

User@spark.co.nz

Broadband password

.....

Forgot your account number or password?
Please contact Broadband provider Or Click to retrieve your account name and password from a previous router

Next

No need to dial

Select setup type **Vodafone**

Please select Internet connection type

Broadband account online PPPOE

Automatically retrieve IP **DHCP** ✓

Static IP

Wi-Fi access point

Access point

Additional ISP Settings

Custom

Internet VLAN ID

802.1Q Tag
Note: The internet VLAN ID provided by the ISP can be configured.
Please ignore it if no VLAN setting is required.

Next